



Title:	DS-19A How to connect Keypad to control Panel	Version:	v1.0	Date:	11/20/2018
Product:	DS-19A Series Network Security Control Panel			Page:	1 of 4

Preparation

1. DS-PK00M-LCD or DS-PK-L
2. DS-19A series Network Security Control Panel or MBUS Security Control Panel

How to connect Keypad to control Panel


1. Find the port for Keypad.

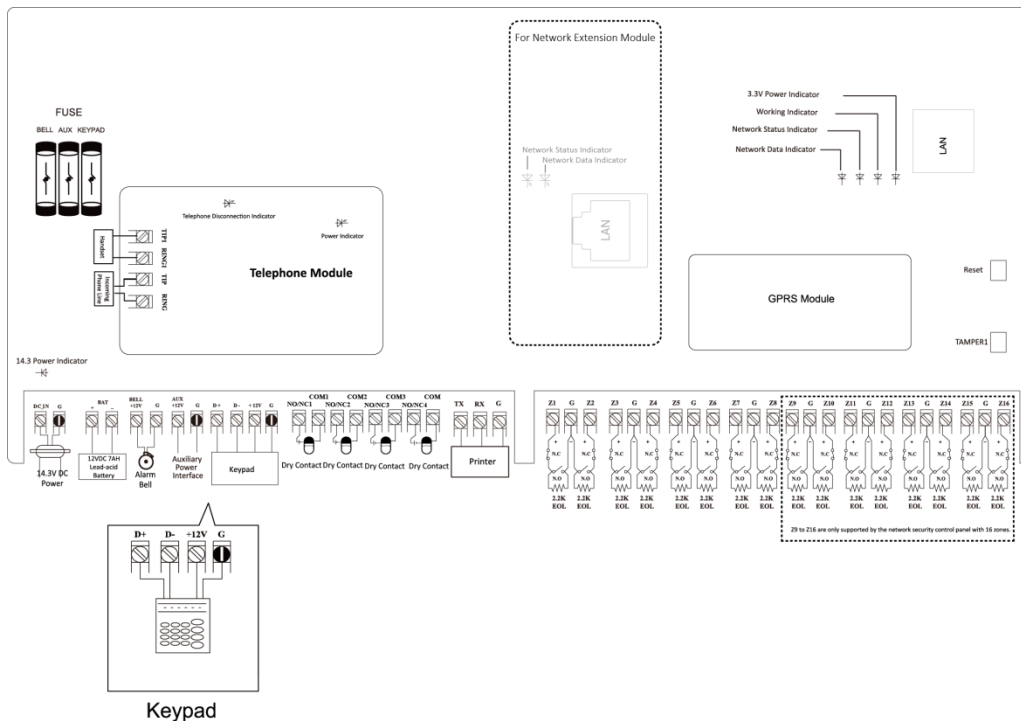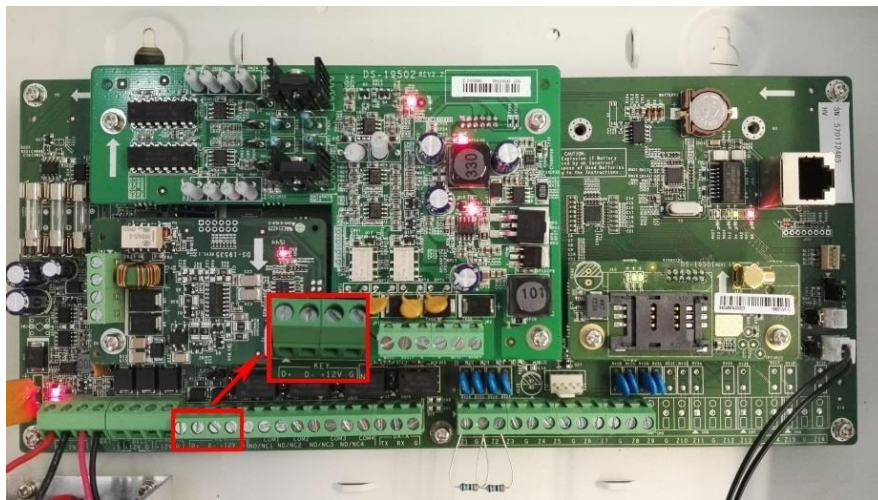


Title:	DS-19A How to connect Keypad to control Panel	Version:	v1.0	Date:	11/20/2018
Product:	DS-19A Series Network Security Control Panel			Page:	2 of 4

2. Connect Keypad to control panel.

- 1) Connect keypad D+, D-, +12V、GND to corresponding port on the panel.

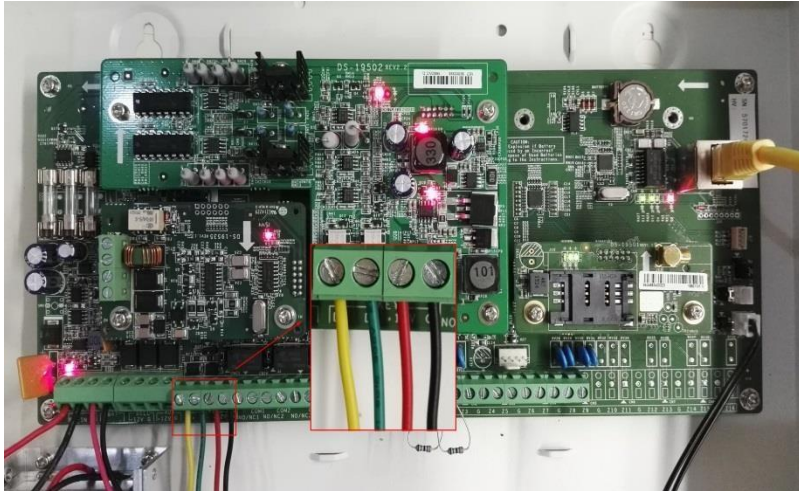

- 2) If you have **more than one keypad or RS485 expander module**, the connection like below, all keypad connection length should not be greater than 1200m

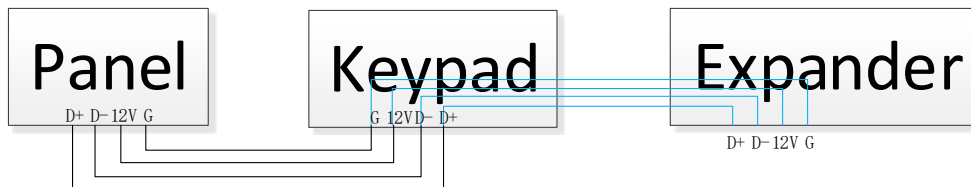

- 3) Then change the DIP address as below, every keypad need **different DIP address**. DIP address 0 means global keypad, others means Subsystem keyboard.



Address: 0



Address: 1

RS485 device address from
0 to 31



Address: 31

Title:	DS-19A How to connect Keypad to control Panel	Version:	v1.0	Date:	11/20/2018
Product:	DS-19A Series Network Security Control Panel			Page:	3 of 4

3. Check the Keypad Status in iVMS-4200

Remote Configuration

Displaying Module Information

Module Type:

Index	Module Address...	Module Type	Module Information	Module Version
1	0	Keyboard-LCD	DS-PK00M-LCD	V1.0.2-18. 1. 9
2	1	Keyboard-LCD	DS-PK-L	V1.0.0-18. 9.19

1

2



Title:	DS-19A How to connect Keypad to control Panel	Version:	v1.0	Date:	11/20/2018
Product:	DS-19A Series Network Security Control Panel			Page:	4 of 4

First Choice for Security Professionals
HIKVISION Technical Support