


<b>Title:</b>	DS-19A How to configure One key Arm	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	1 of 3

## Preparation

1. DS-PK00M-LCD or DS-PK-L
2. DS-19A series Network Security Control Panel or MBUS Security Control Panel
3. iVMS-4200 client



## How to configure one key Arm

1. **Connect keypad to Security control panel.**
2. **Connect Security control panel to iVMS-4200.**
3. **Open remote configuration**
  - 1) Partition---Basic Settings---Enable one Key Arm.
  - 2) Save.

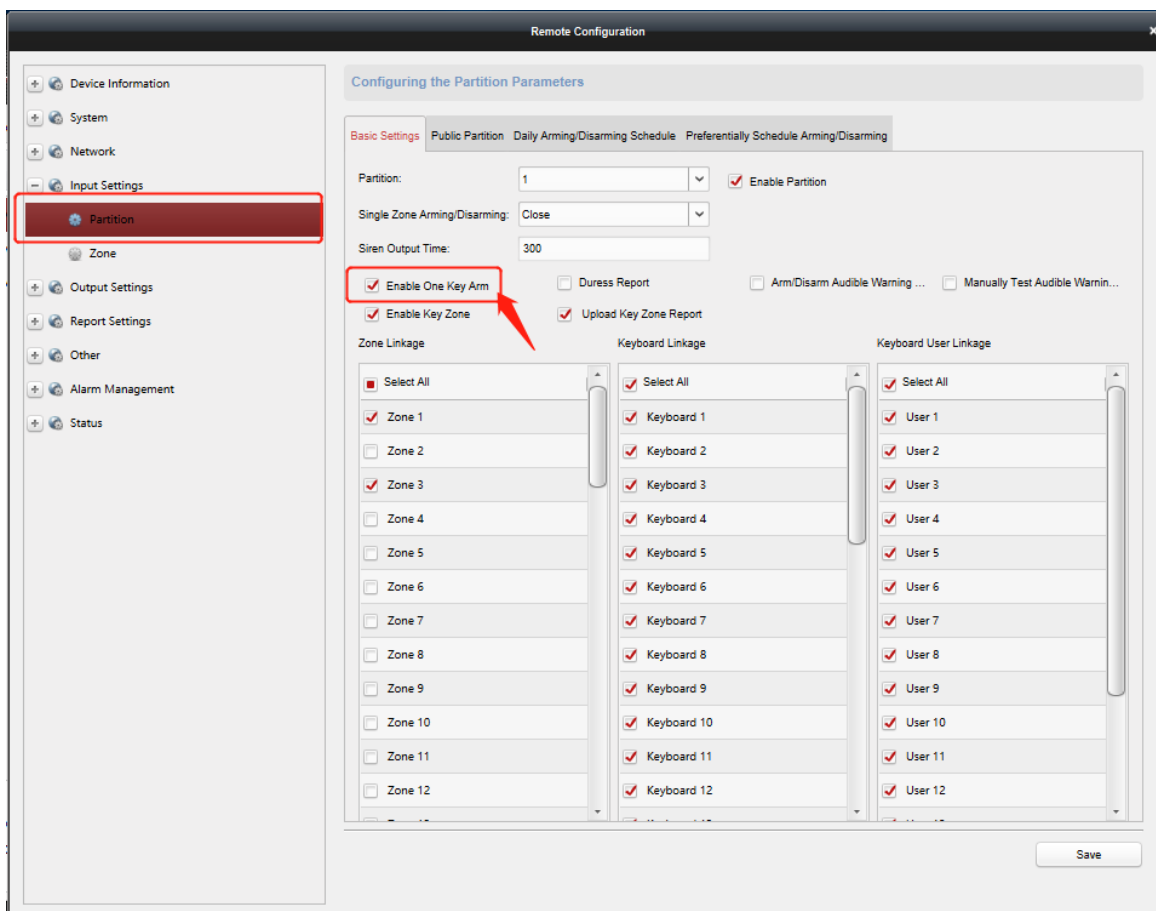

<b>Title:</b>	DS-19A How to configure One key Arm	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	2 of 3

## 4. Keypad operate

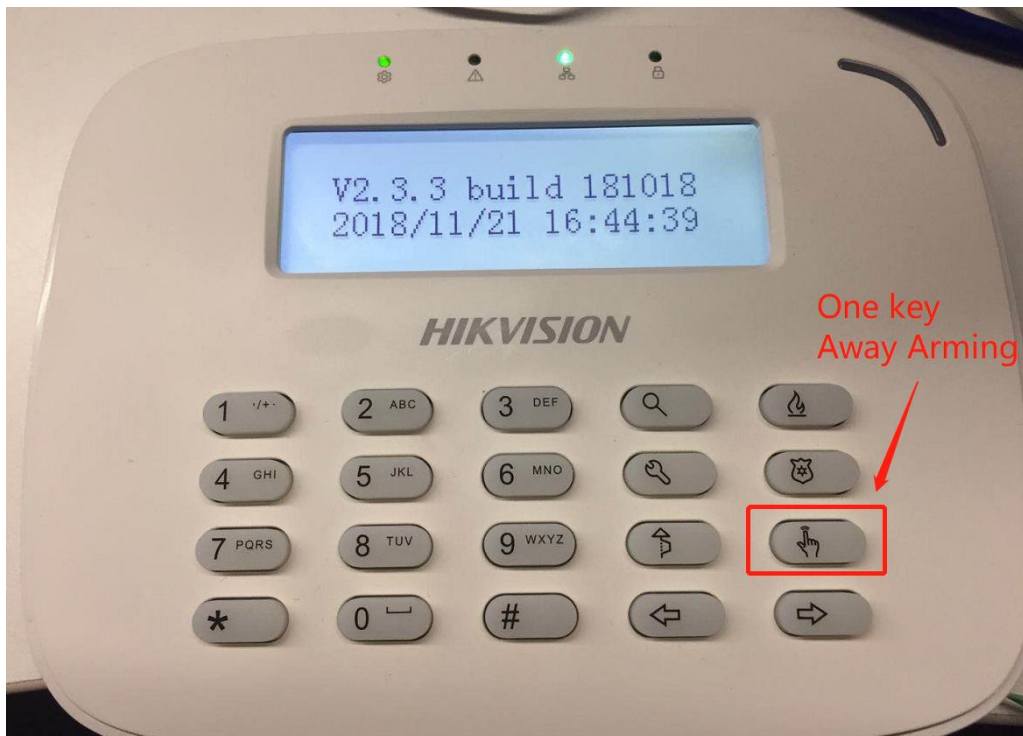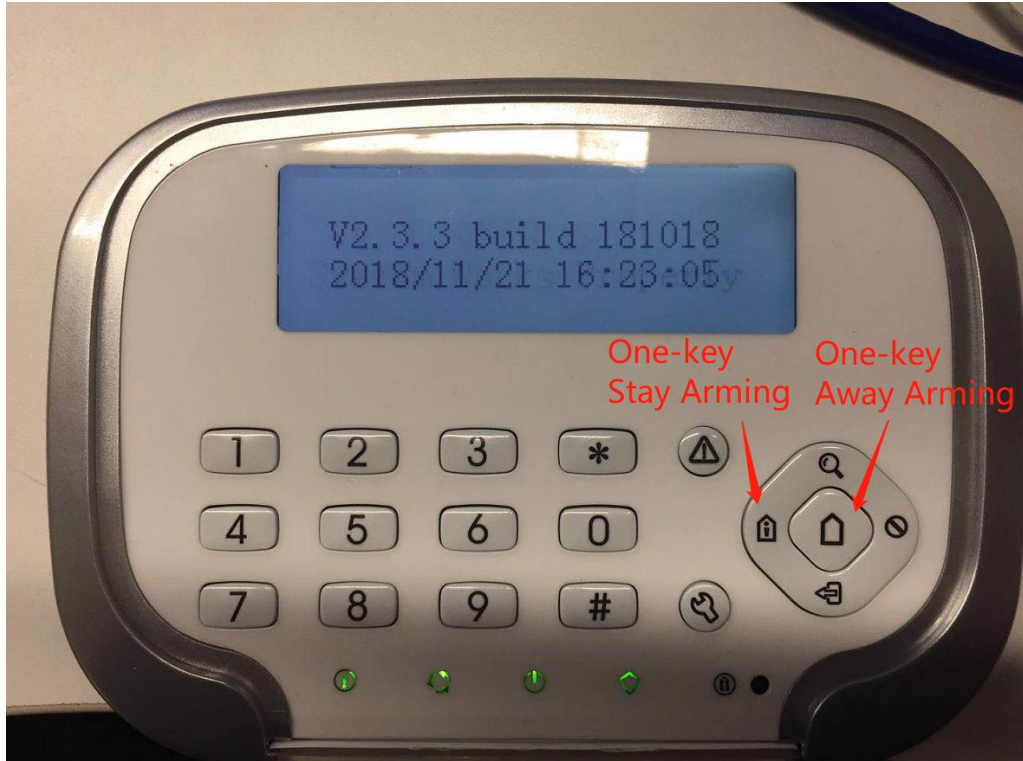

<b>Title:</b>	DS-19A How to configure One key Arm	<b>Version:</b>	v1.0	<b>Date:</b>	11/21/2018
<b>Product:</b>	DS-19A Series Network Security Control Panel			<b>Page:</b>	3 of 3

 **Note**

1. If you want Disarm by keypad, need enter [**Password**] + [#] on keypad.
2. One key Arm need be operated in Partition, so you need enter Partition interface by use command \***3N**# .

**First Choice for Security Professionals**  
**HIKVISION Technical Support**