

Title:	DS-PEA How to configure SIP Server	Version:	v1.0	Date:	26/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	1 of 5


Preparation

1. DS-PEA1-21 Panic Alarm Station, DS-PEA4H-10 Panic Alarm Master Station
2. Professional Client iVMS-4200 2.7.4.5

DS-PEA How to configure SIP Server

When you want to connect DS-PEA1-21 with DS-PEA4H-10 by SIP server, you need configure something by iVMS-4200.

1. Add to iVMS-4200.

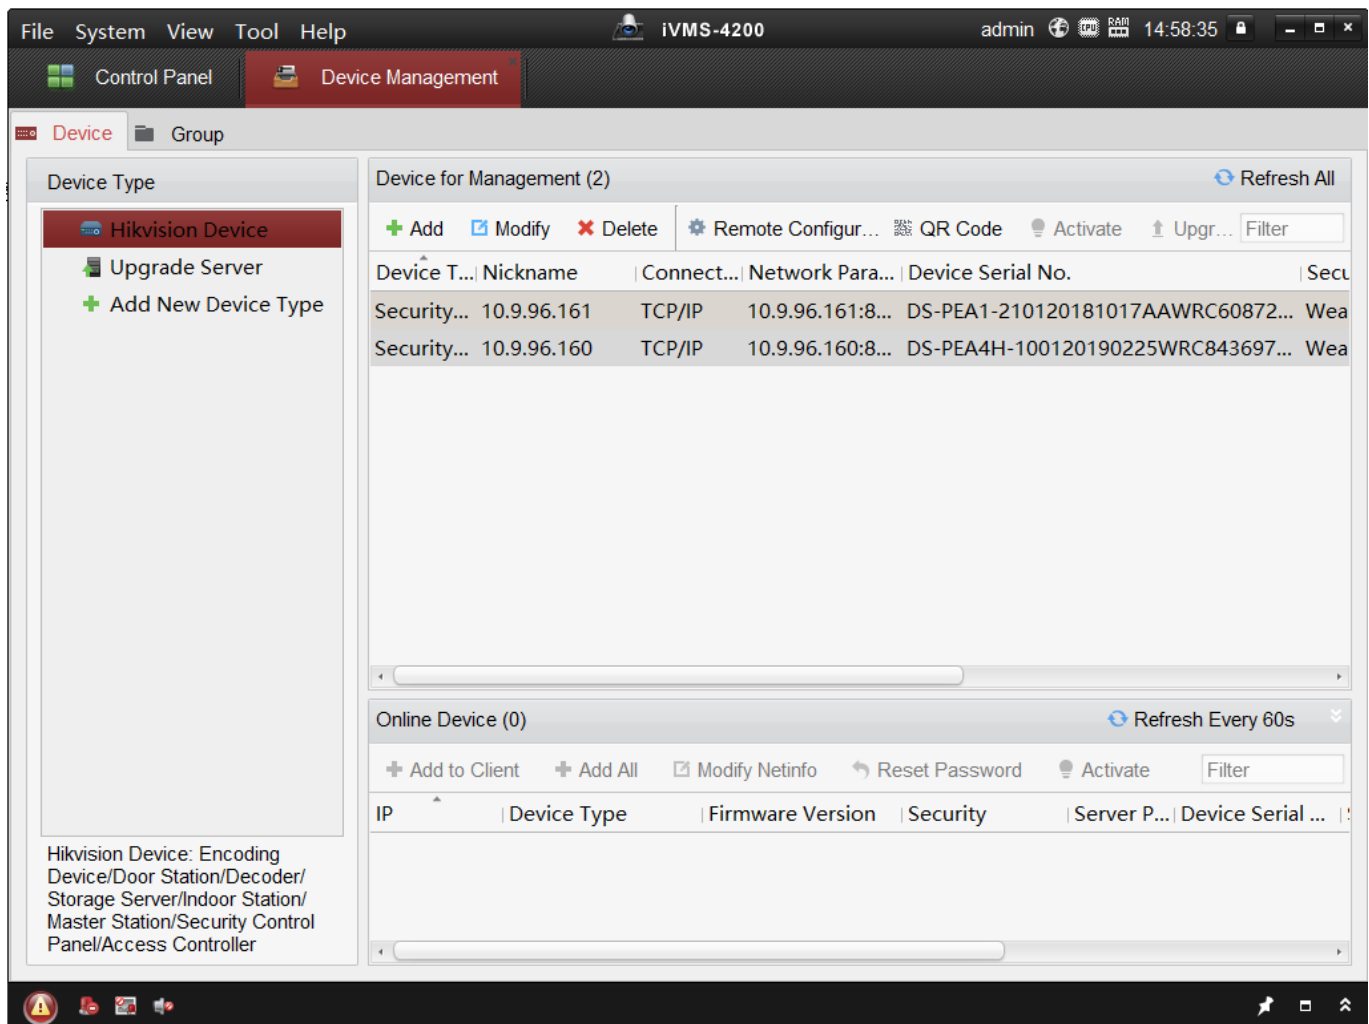

Title:	DS-PEA How to configure SIP Server	Version:	v1.0	Date:	26/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	2 of 5

2. SIP Setting configuration

Step 1: Click Remote **Configuration** > **Network** > **Sip Setting** to enter the Sip configuration interface.

Step 2: Check Enable box to enable the Sip server.

Step 3: Enter the Sip server parameters including **IP address, port No., local No., display name, login cycle**

Note

The server port No. ranges from 1024 to 65535.

The local No. ranges from 0 to 999999.

The login cycle ranges from 1 to 30 (min)

Step 4: Click Save to save the settings.

Note

1. For Private SIP, Server Port use 5065 Default.
2. DS-PEA4H-10 Panic Alarm Master Station Server IP address use Device IP.
3. DS-PEA1-21 Panic Alarm Station SIP IP address use Master Station IP.
4. Different Device need use different Local No.
5. If you configure Sip IP address, but can't save, check your 4200 at first.

Title:	DS-PEA How to configure SIP Server	Version:	v1.0	Date:	26/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	3 of 5

3. DS-PEA4H-10 Panic Alarm Master Station SIP Setting

Check the Login Status: Registered means login successfully

Remote Configuration

Configuring the SIP Parameters

Note: The connection to 28181 will be disabled if you start SIP conn...

Login Status: **Registered**

Server: IP Address

Ip Addr: 10.9.96.160

Server Port: 5065

Local No.: 0

Display Name: 0

Login Cycle: 10 Minute(s)

Save

Title:	DS-PEA How to configure SIP Server	Version:	v1.0	Date:	26/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	4 of 5

4. DS-PEA1-21 Panic Alarm Station SIP Setting

Check the Login Status: Registered means login successfully

The screenshot shows the 'Remote Configuration' window for a device. The left sidebar contains a tree view of configuration categories, with 'SIP Settings' selected. The main area is titled 'Configuring the SIP Parameters' and contains the following settings:

- Enabled Note: The connection to 28181 will be disabled if you start...
- Login Status: **Registered** (highlighted with a red box)
- Ip Addr: 10.9.96.160
- Server Port: 5065
- Local No.: 1
- Display Name: 1
- Login Cycle: 10 Minute(s)
- Save button



Title:	DS-PEA How to configure SIP Server	Version:	v1.0	Date:	26/02/2019
Product:	DS-PEA Series Emergency Alarm Device			Page:	5 of 5

First Choice for Security Professionals
HIKVISION Technical Support