

HOW TO



Set Live View Duration on Indoor Station





On Indoor station local page, you can tap Live View icon to check the camera live view of Door Station. This guide will help introduce how to set the live view duration on indoor station.

Settings on Indoor Station

Tap **Settings** on Home page > **Advanced Settings** on sub page.

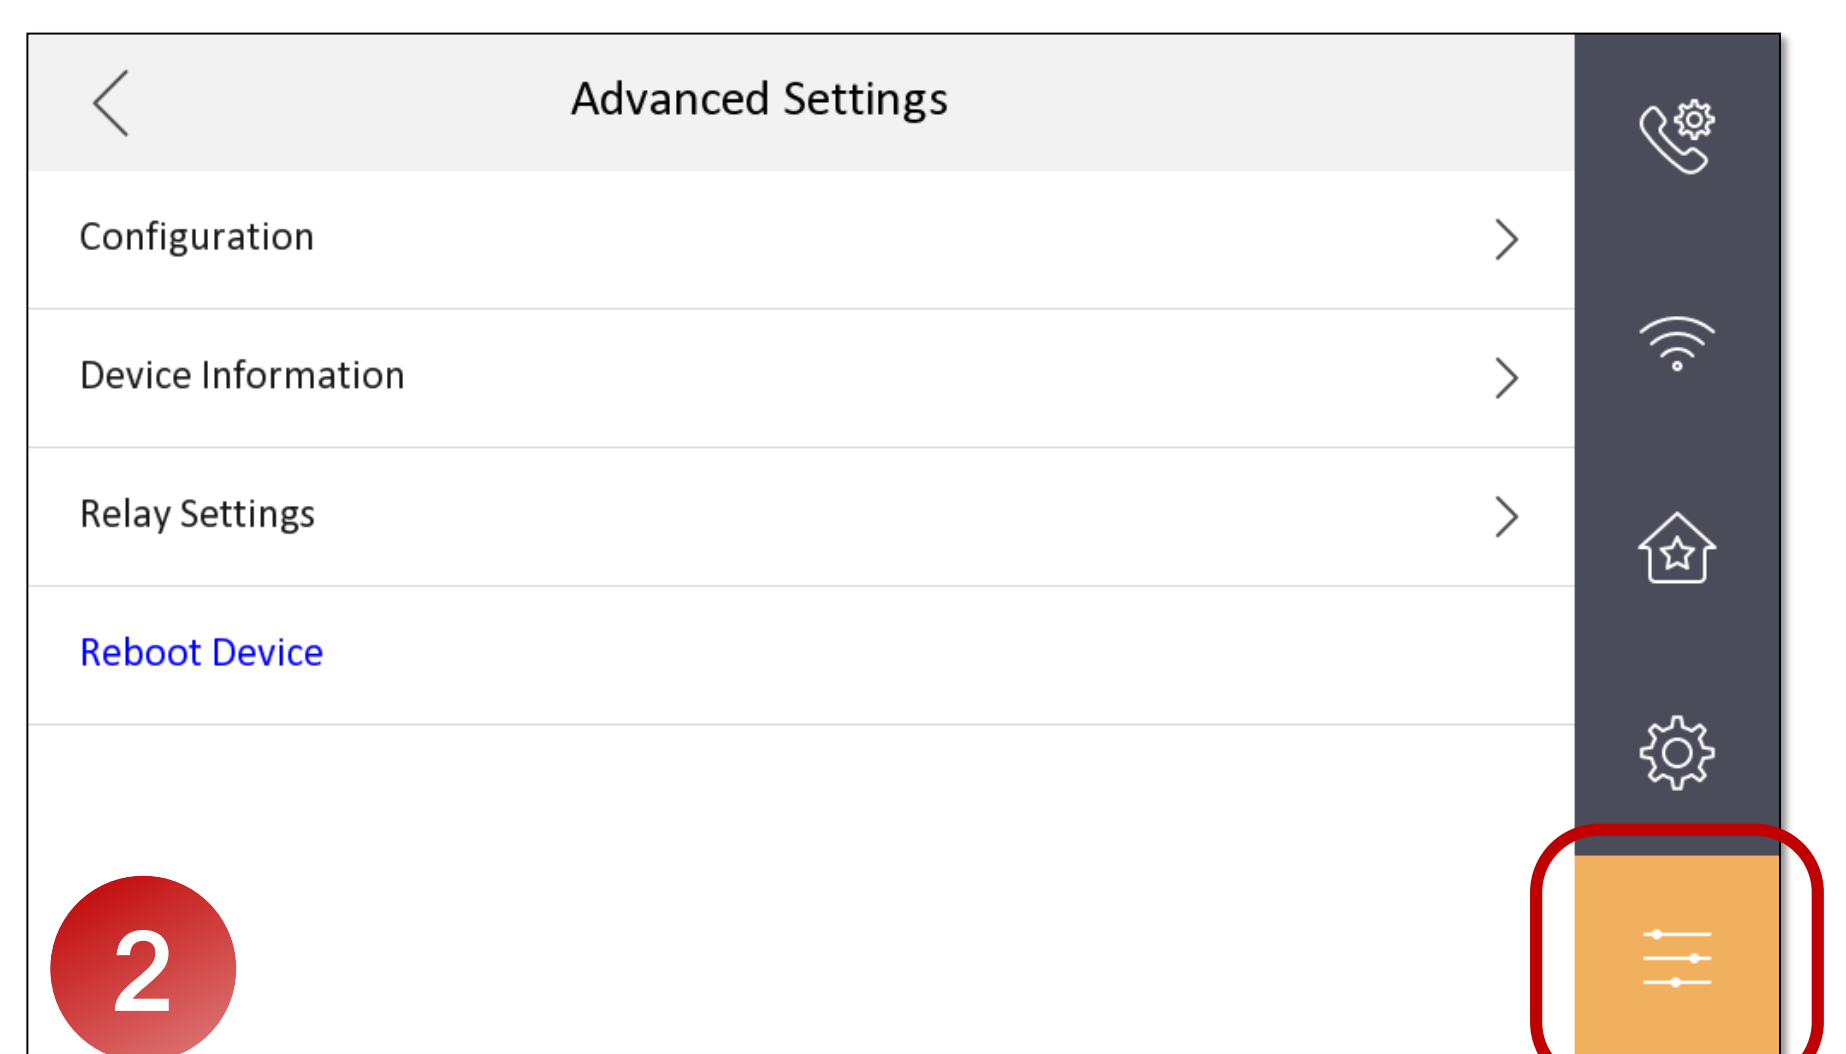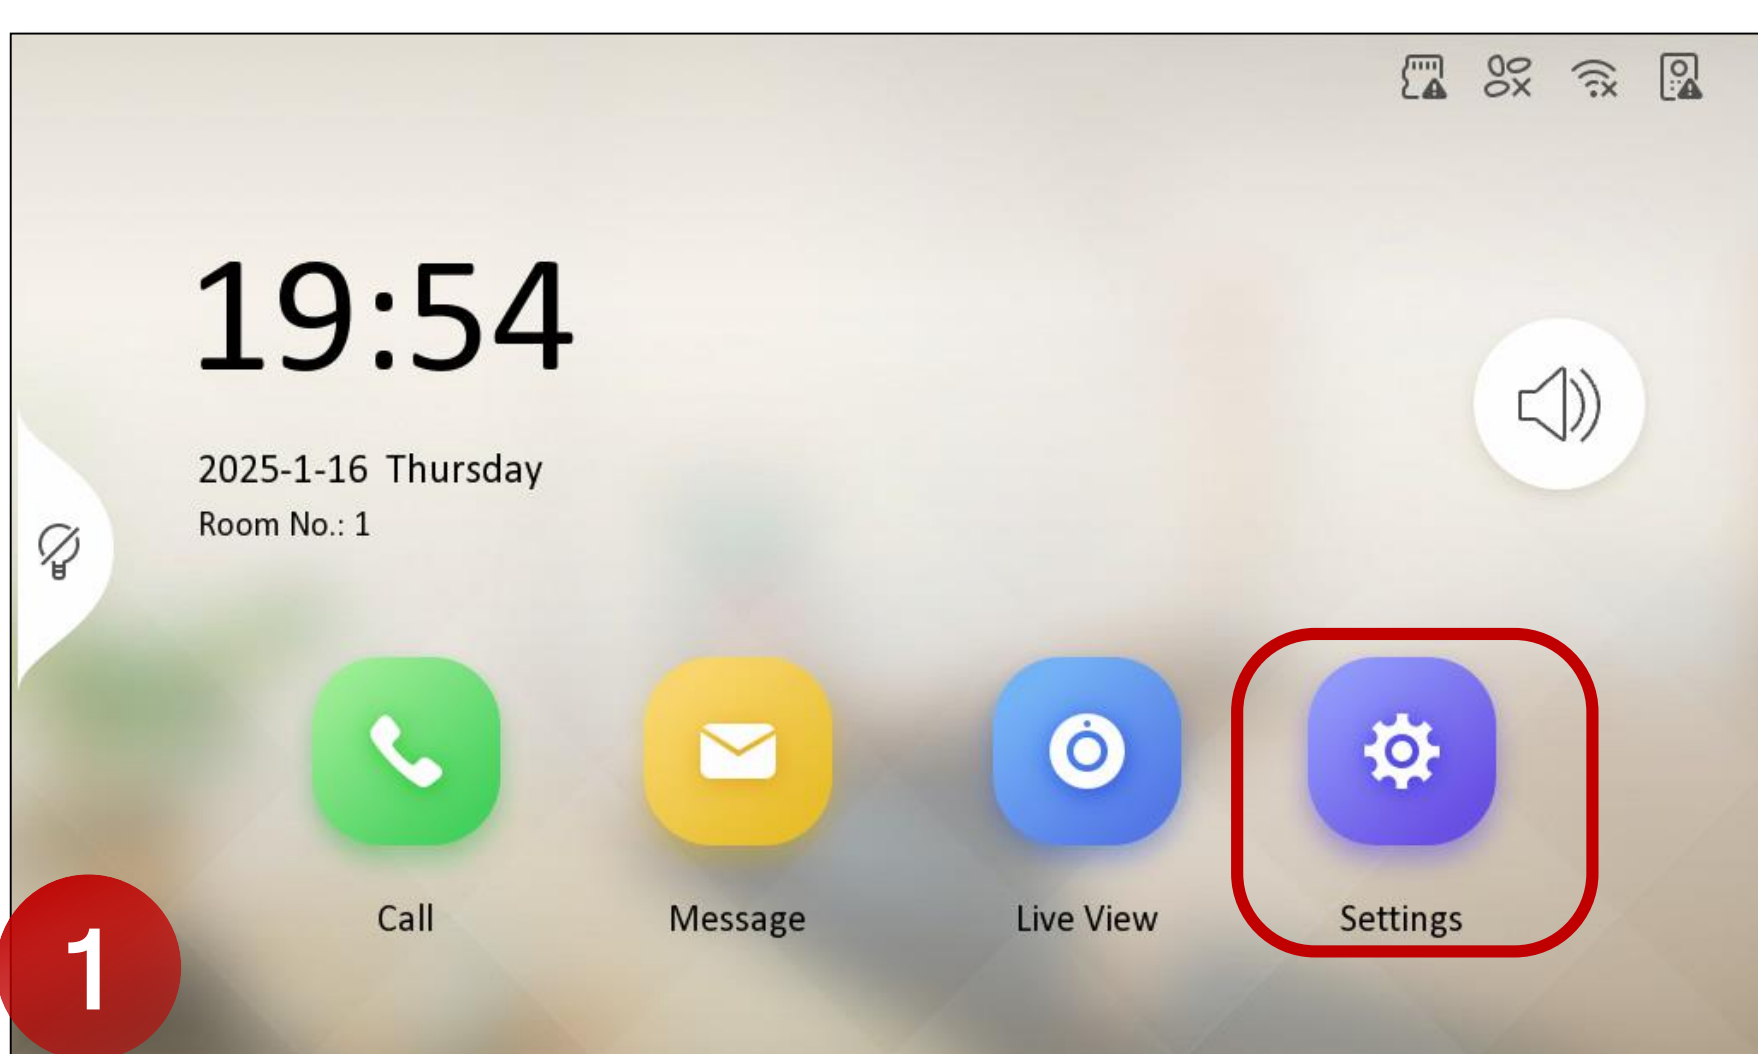

Tap **Configuration** > Enter Device Admin Password to enter Local Information page.

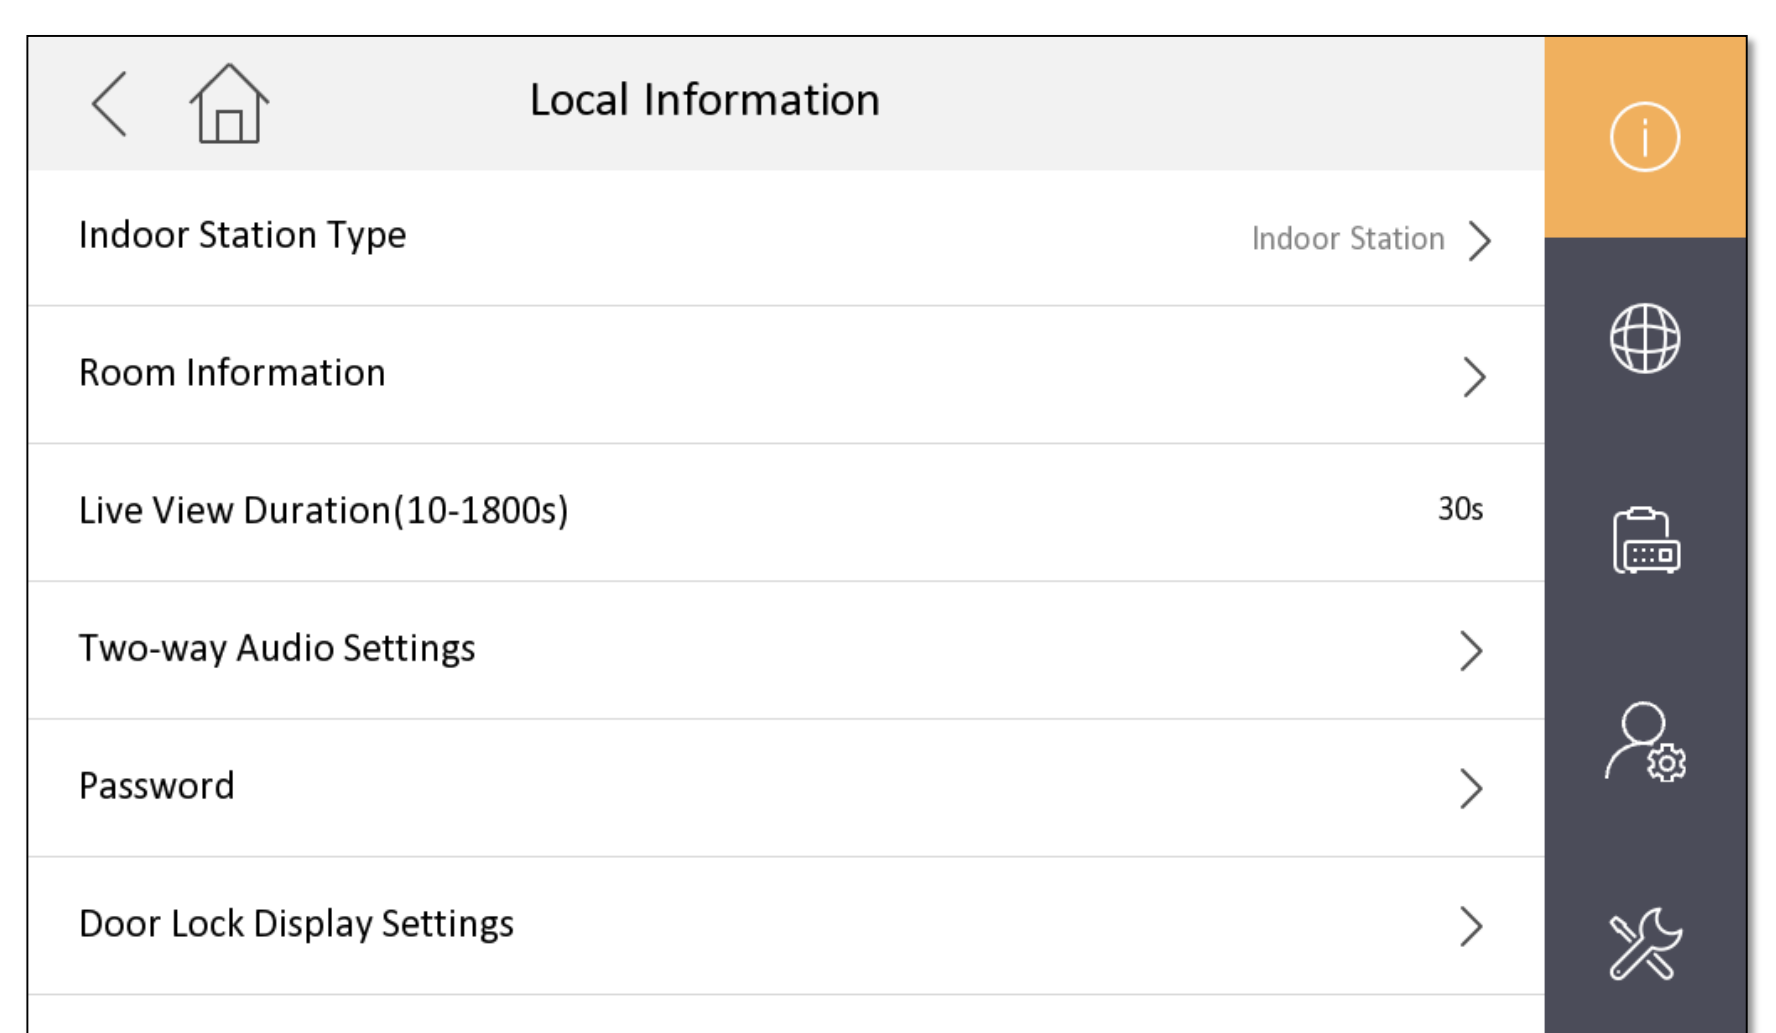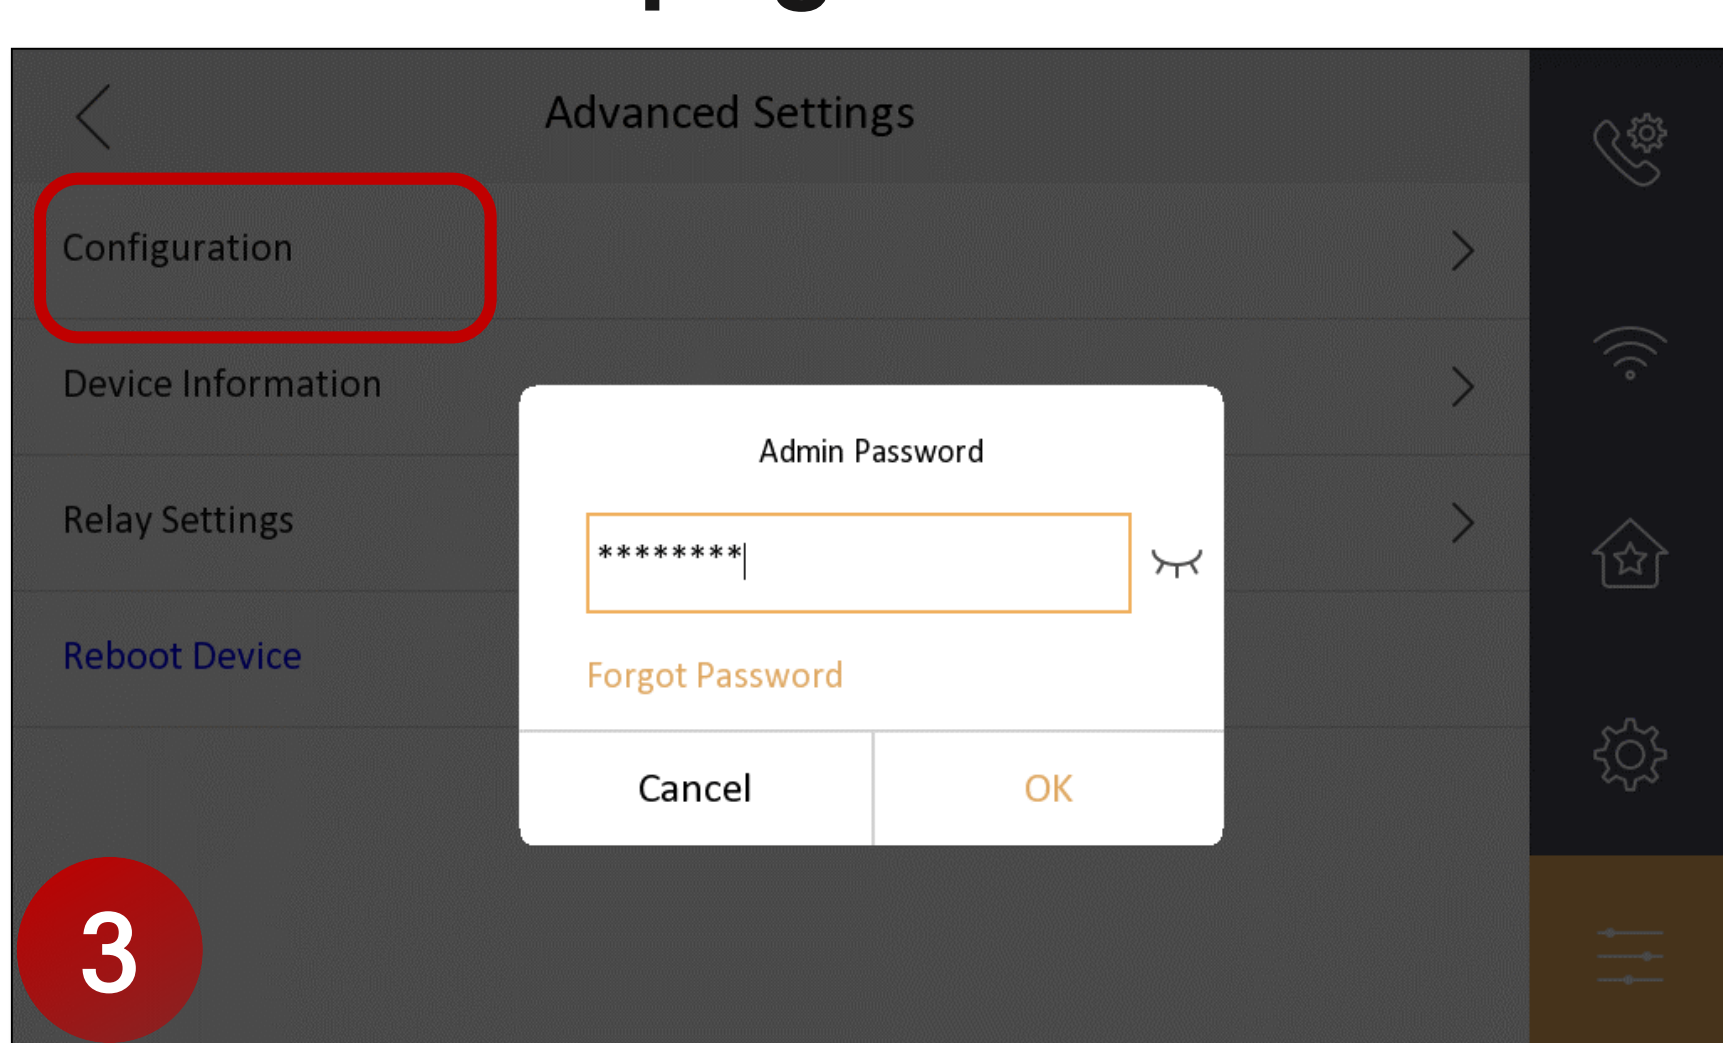

Tap **Live view Duration** to modify live view duration (10s-1800s), the default value is 30s.

